

Title	Function	Adjustment range	Default setting
F 734	Panel emergency stop operation prohibition	0: Permitted, 1: Prohibited	0
F 735	Panel reset operation prohibition	0: Permitted, 1: Prohibited	0
F 736	ENOD / FNOD change prohibition during operation	0: Permitted, 1: Prohibited	1
F 737	All key operation prohibition	0: Permitted, 1: Prohibited	0
F 738	Password setting (F 700)	0: Password unset 1-9998 9999: Password set	0
F 739	Password verification	0: Password unset 1-9998 9999: Password set	0

★ Parameters can be edited regardless of the setting of F 700 by assigning the parameter editing permission (function number 110, 111) to an input terminal.

Note1: F 700=2 and 4 will be available after reset operation.

When protection using a password is necessary, set and remove with the following method.

■ Password setup method

Preparation: Parameters other than F 700, F 738, and F 739 cannot be changed when F 700 is set to 1 to 4.

- (1) When F 738 or F 739 is read out and the value is 0, a password hasn't been set.
You can set a password.
- (2) When F 738 or F 739 is read out and the value is 9999, a password has already been set.
- (3) You can set a password if it hasn't been set. Select and register a number from 1 to 9998 for F 738.
The number is the password. Do not forget your password as it is required to release the lock.
- (4) The settings for parameter F 700 cannot be changed.

Note2: The lock cannot be released if you forget the password. Do not forget this password as we cannot retrieve it.

Note3: Password cannot be set when parameter F 700=0.
Set the password after parameter F 700=1 to 4.

Note4: Password can be read out to parameter writer (optional device) only for 5 minutes after setting F 738. Please note that password will not be able to read out due to password protection after 5 minutes have elapsed or when the power is off.

■ Password examination method

- (1) When F 738 or F 739 are read out and the value is 9999, a password has already been set.
Password has to be removed in order to change parameters.
- (2) Enter a the number (1 to 9998) registered to F 739 when the password was set for F 738.
- (3) If the password matches, PASS blinks on the display and the password is removed.
- (4) If the password is incorrect, FAIL blinks on the display and F 739 is displayed again.
- (5) When the password is removed, the setting for parameter F 700 can be changed.
- (6) By setting parameter F 700=0, the all parameter settings can be changed.

Note5: Entry of F 739 setting is possible up to 3 times. Please note it is impossible to set, if you enter the wrong number for 3 times. Number of times is reset after power is off.