

METER WITH A MULTICOLOURED BARGRAPH

NA5PLUS



USER'S MANUAL



Contents

1. APPLICATION	3
2. NA5PLUS SET	• • • • • • • • • • • • • • • • • • • •
3. BASIC REQUIREMENTS, OPERATIONAL SAFETY	
4. INSTALLATION	
4.1. Installation.	
4.2. External connections diagram	
5. Operation	8
5.1 Changing meter parameters from the keyboard	
6. RS-485 Interface	
6.1. Serial interface connection method	22
6.2 MODBUS protocol	
6.3 Description of the MODBUS protocol functions	
6.4 Map of NA5Plus meter registers	
6.5 Registers for recording and reading	
6.6 Read-only registers	
7. Meter configuration with E-Con software	
8. METER PROGRAMMING EXAMPLES	34
9. BEFORE YOU REPORT A DEFECT	35
10. SOFTWARE UPDATE	37
11. TECHNICAL DATA	38
12 ORDERING CODES	41

1. APPLICATION

NA5Plus series meters with a bar graph have a universal input designed to measure temperature, resistance, voltage from shunts, standard signals, dc voltage and dc current. They can be used in various industries, such as: food industry, pumping stations and sewage treatment plants, chemical industry, weather stations, meteorological stations, breweries. They are intended for the visualisation of the measured quantity and evaluation of change trends of controlled technological processes. They can also be used in automation systems where programmed controllers are applied.

NA5Plus meters have, depending on the version, one or two continuous outputs (voltage or current), 4 relay outputs or 8 open collector (OC) type outputs, as well as an RS-485 interface. The meters are programmable via the keyboard and via RS-485.

NA5Plus meters perform the following functions:

- measurement of the input quantity and displaying it on the display and the bar graph,
- recalculations of the input signal into indication on the base of the individual multipoint characteristics,
- arithmetical functions: raising to a power, extraction of roots,
- programming of colours and bar graph resolutions,
- signalling of exceeding the set alarm values;
- recording of the measured signal in programmed time intervals,
- storage of maximum and minimum values,
- programming of the measurement averaging time,
- programming of the indication resolution,
- deadlock of the parameter introduction by means of a password,
- conversion of the measured quantity into a voltage or current output signal,
- RS-485 interface support in MODBUS RTU protocol.




Fig. 1: View of NA5Plus meter.

2. NA5PLUS SET

The complete set of NA5Plus meter includes:

- NA5Plus Meter 1 pc
- user's manual 1 pc
- signal terminal strip (16 terminals)
 2 pcs
- supply terminal strip (3 terminals)
- holders to fix the meter in the panel
 2 pcs

3. BASIC REQUIREMENTS, OPERATIONAL SAFETY

Meaning of the symbols used in this manual:



Warning!

Warning of potentially dangerous situations. It is especially important to read and understand these instructions before connecting the device. Failure to meet the instructions that are marked with this symbol can result in serious injury of personnel and damage to the device.



Caution!

Generally useful notes. Following these instructions ensures easy operation of the device. The user must take them into account when the operation of the device does not meet the user's expectations.

Possible consequences when these instructions are not followed!

In terms of operational safety, the meter meets the requirements of DIN EN 61010-1.

Safety instructions:



- The assembly and the installation of the electrical connections may be carried out only by a duly qualified electrician.
- The person performing the installation is responsible for the safety of the system in which devices is installed.
- Before turning on the module verify the connections.
- Removal of the meter housing during the warranty period voids the warranty. The
 module power supply must be turned off and the input circuits disconnected before
 opening the housing.
- The device is intended for installation and use in industrial electromagnetic environments.
- A switch or a circuit-breaker should be installed in the building or facility. It should be located near the device, easily accessible to the operator, and suitably marked.
- In the event of damage, the meter can be repaired only by the service authorized by the manufacturer.
- Before using the repaired meter make sure that it is working properly.
- Connection of the meter and/or its usage inconsistently with this manual can reduce the operational safety of the meter.

4. INSTALLATION

4.1. Installation

The NA5Plus meter is designed to be mounted on a panel. For this purpose, a 44.0×137.5 mm hole should be prepared in the panel. The thickness of the material from which the panel was made should be in the 1.45 mm range.

In the back of the meter housing there are detachable terminal strips, enabling connection of power supply, input signals, output signals and RS482 interface with wires with a cross-section of up to 2.5 mm2. The dimensions of the meter are shown in Fig. 2.

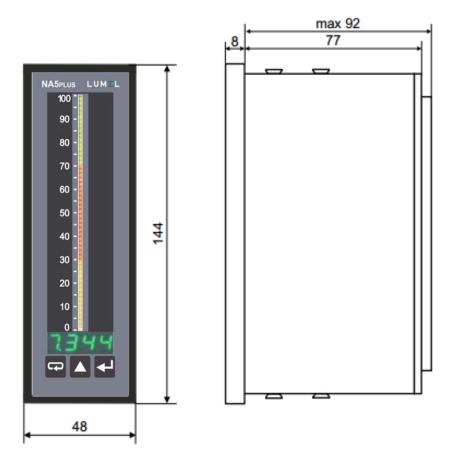


Fig. 2: Dimensions of the meter

4.2. External connections diagram

The connections of the meter are shown in Figure 3. In the event when the meter is powered with DC voltage, the voltage polarity does not matter.

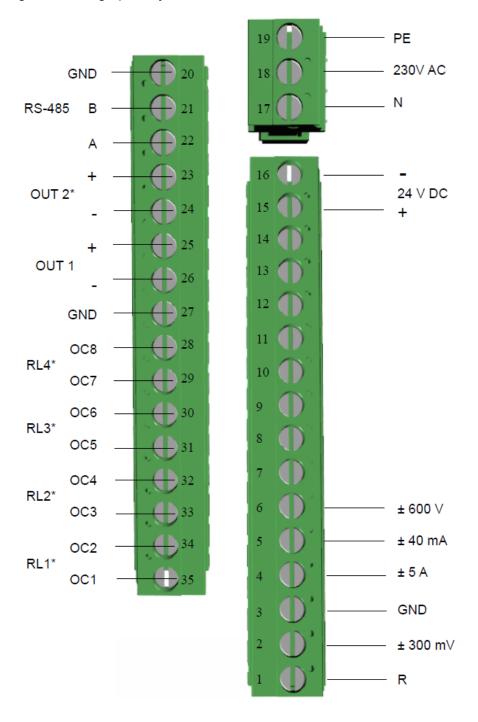


Fig. 3: Electrical connections of NA5Plus meter

^{*)} optional elements, depending on the meter's version

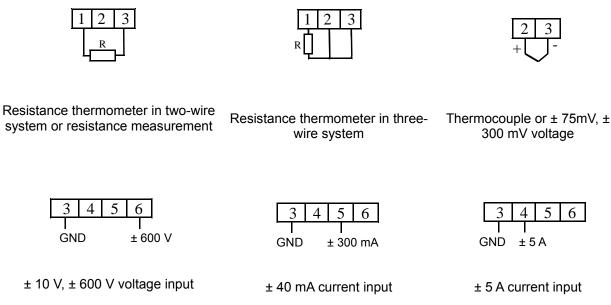


Fig. 4: Input signals connection method

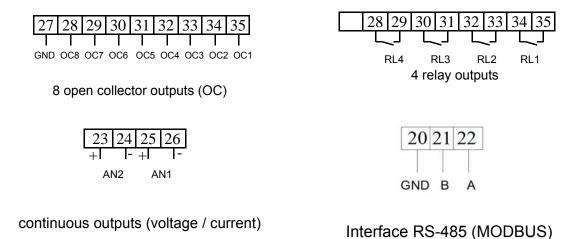


Fig. 5: Output signals connection method

depending on the version

Taking into consideration electromagnetic interference it is recommended to use shielded conductors for the connection of input and output signals. The power supply must be connected by means of a two-wire conductor with a suitable cross-section ensuring its protection by means of an installation fusible cut-out, in case of a short-circuit.

The requirements concerning the supply cable are regulated by EN 61010-1 p.6.10 standard.

5. Operation

After connecting external signals and switching on the power supply, the meter displays the type and current version of the meter program.

After ca 3 seconds, the meter switches automatically to the operating mode in which it carries out measurements and displays the measured value on the display and the bar graph. Depending on alarm parameters settings, the resolution and bar graph type, alarm thresholds are also displayed on the bar graph. The meter blanks automatically insignificant zeros.

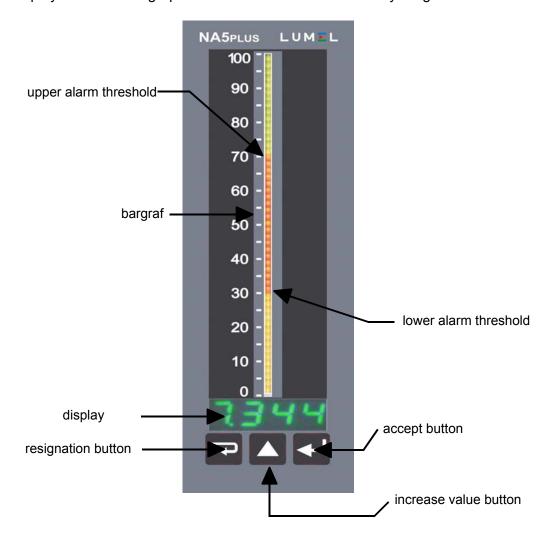


Fig. 6: Description of the front panel of the NA5Plus meter

Functions of the keys:



accept button

- entering the programming mode (hold this key for about 3 seconds).
- entering the chosen parameter level,
- entering the parameter value changing mode
- accepting the changed parameter value.



value increase key

- displaying the minimum and maximum values successively for subsequent measurement channels
- navigating the preview menu or programming matrix
- changing the value of the selected parameter increasing the value



cancel key

- entering the menu of registered results
- entering the parameter preview menu (hold for about 3 seconds)
- exit from the preview menu or programming matrix
- resignation from the parameter change

Pressing and holding the key for about 3 seconds causes entering the programming mode. The programming mode is secured with the **5**££ security code.

Pressing and holding the key for about 3 seconds causes entering the menu of the preview and the menu of recorded values. Navigating the preview menu is done using the key. In this menu, all programmable parameters of the meter are available for read-out, with the exception of service parameters. The exit from the preview menu is done by means of the key.

An overview of the recorded values is possible after pressing the key on the c 5 to parameter in the preview menu. The recorded result number is displayed alternately with the value e.g. a320/2174. Navigating the recorded values is done using the key. Holding this key for longer than about 2 seconds will speed up the browsing. Pressing the key at any time will display the number of recorded results. The exit from the viewing recorded values is done by pressing the key.


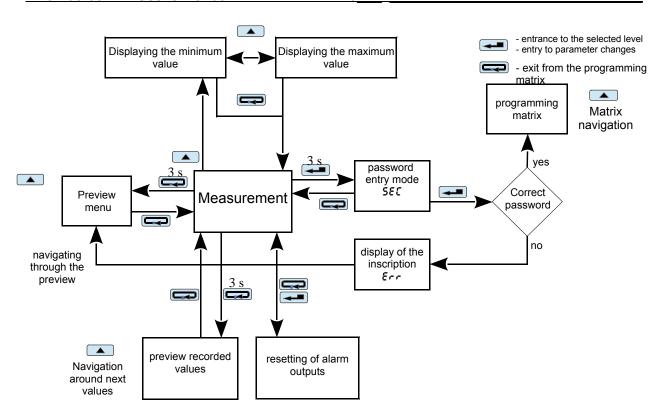


Fig. 7 The NA5Plus meter operation algorithm

Displaying the following symbols and inscriptions on the display means:

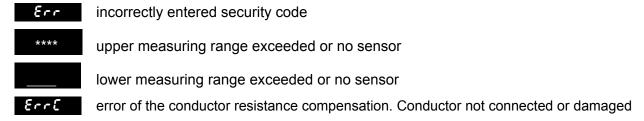


5.1 Changing meter parameters from the keyboard

Pressing the key for approx. 3 s causes the display of the SEC message alternately with the factory-set value of 0. Entering the correct code results in entering the programming mode. Figure 8 shows the transition matrix in the programming mode. The key allows for moving around the main parameters groups, e.g.: Ch1, bAr1, AL1, AL2,etc.


Pressing the key on the given level, causes the entry into parameters of this level. Moving around a given level takes place by means of the key. To change the value, use the key. To cancel the parameter change, press the key. The same key is used to exit the selected level and programming matrix to the measurement.

The transitions matrix in the programming mode is shown in Figure 9.


During operation of the meter in the programming mode, the measurement result is displayed on the bar graph, except for selecting the display test function.

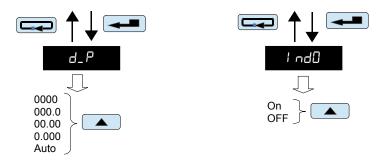

Examples of changing the value of the selected parameter (parameter - symbol)

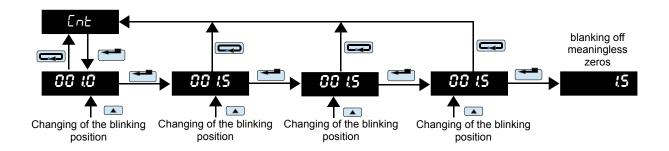

Example of changing the value of the selected parameter with a fixed decimal point (numeric parameter)

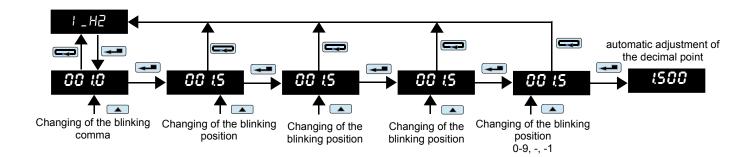

Example of changing the value of the selected parameter with a variable decimal point (numeric parameter)

Fig. 8 Examples of changes in parameter values

NA5A-07 User's Manual 12

49 I

parameter

of

individual

characteris

tics

1 H2 1

parameter 21

of

individual

tics

characteris characteris

number of

points

determine

d by the PtS value

(max. 21)

935 1

parameter

21

of

individual

tics

-													
	Main menu						Pai	ameters	of the se	elected le	evel		
		E Y P E	חט יך	Loln	Hiln	Func	Con	d_P	Ent	i ndi	PŁ5	1 HD 1	
	Eh I	Input type	temperat ure unit °C/F	lower value of the input range	upper value of the input range	mathem atical function s	type of compen sation	decimal point	measure ment time	individua I input characte ristics	number of points of Individual characteris tics	parameter 1 of individual characteris tics	c
		ЕУРЬ	coLr	brL	ЬгН								
	bAr I	bar graph type	bar graph colour	lower threshold of bar graph indication	upper threshold of bar graph indication						1		
	AL I	PrL	PrH	E YPR	9FA	HOLd	CUrL	СИ-Н	dErt	d_E			
	 AL8	lower alarm threshold	upper alarm threshold	alarm type	alarm delay	holding up the alarm	colour of the lower alarm marker	colour of the upper alarm marker	Value of change in the measure d signal	time of change in the measure d signal			
	Out 1	IndO	9_H I	0_91	9_H2	0_92							
	0uE2	output individulal characteri stics	parameter of individual characteri stics	parameter of individual characteri stics	parameter of individual characteri stics	parameter of individual characteri stics							
	UArt	6Rud	nodE	Addr									
		baud rate	method of transmiss ion	device address									

NA5A-07	User's Manual		13				
5Er	E5E	Hour	SECU	ELrL	CL-H	dFLE	
	display and bar graph test	time setting	setting the settings access code	erasing the minimum values	erasing the maximum values	factory settings	
L0 6 r	rEC	Hr_ I	dA_ I	Intl			
	recording	recording start	recording date	recording interval			

Figure 9 Transition matrix in programming mode.

Programmable parameters of the NA5Plus meter


	Symbol on the display	Parameter description	Scope of changes			
	EAL.	Input type	resistance thermometer			
	L J1		PE I_ Pt100			
			PE5 - Pt500			
			PL 10 - Pt1000			
			thermocouples:			
			EE-IJ – J thermocouple			
			EE−h – K thermocouple			
			EE- □ – N thermocouple			
			EE-E – E thermocouple			
			EE-r - R thermocouple			
			EE-5 – S thermocouple			
			EE-E - T thermocouple			
			$\Gamma E Z$ - resistance up to 10 kΩ			
			75 nu - voltage up to ± 75 mV			
			300 n - voltage up to ± 300 mV			
			### 100 - voltage up to ± 10 V ##################################			
			รอบ - voltage up to ± 600 v เรษิก์ส - current up to ± 40 mA			
			58 - current up to ± 5 A			
	nu iF	Unit of thermometric quantity Possibility to select the unit in which the temperature	.£ : Celsius degrees			
		measurement result is displayed (°C/°F)	.F – Fahrenheita degrees			
7	Loin	Lower value of the input range	Possible settings: -19999999			
S	20, ,,	Setting the LoIn and HiIn parameters gives the possibility of narrowing the measurement range	At the input signal <loin display="" exceeding.<="" lower="" meter="" range="" td="" the="" will=""></loin>			
le.		possibility of harrowing the measurement range	The LoIn <hiln be="" condition="" met.<="" must="" td=""></hiln>			
<u> </u>			The parameter does not take into account the individual characteristics it works on the measured signal only.			
Input parameters		Upper value of the input range	Possible settings: -19999999			
ar	Hiln	opper value of the input range	At the input signal <hiln display="" meter="" td="" the="" upper<="" will=""></hiln>			
t p			range exceeding. The LoIn < Hiln condition must be met.			
			The parameter does not take into account the individual			
			characteristics it works on the measured signal only.			
	Func	Mathematical functions performed on channels	UFF - mathematical functions are turned off			
			59r – exponentiation (result) ²			
			59rE-square root \sqrt{result}			
	Eon	Type of compensation for changes in the sensor working conditions	Avto - automatic compensation (in the case of resistance thermometers and resistance measurement			
		- in the case of a resistance thermometer and	it requires a three-wire line)			
		resistance measurement, it applies to the compensation of changes in the resistance of wires	0,060,0 °C – reference temperature value for thermocouples			
		connecting the sensor with the meter	$0,040,0 \Omega$ – resistance of two wires for resistance			
		- in the case of a thermocouple, it applies to the compensation of temperature changes of the	thermometers and resistance measurements			
		reference joints	Entering values outside the manual compensation			
			range (e.g. 70.0) will cause switching on automatic compensation .			
	d_P	Decimal point setting The setting works both with the individual	Possible settings:			
		characteristics switched off and switched on. Entering	0000			
		a decimal point which makes displaying four	0000			
		characters on the display impossible results in displaying the lower or upper exceeding.	0.000			
			Rubo - automatic selection of decimal point			
	Ent	Averaging time of the measurement	0,0999.9 s Entering 0 causes the measurement to be turned off			
			and the meter to stop working. The meter displays the			
			time in this state. The bar graph is blank.			


		I	
	i ndi	Turning off or on individual characteristics	☐n – characteristics on
			DFF – characteristics off
			Distribution of the state of th
	PES	Number of points of Individual characteristics	Possible settings: 221
	, 53	Determining the number of points for a multi-point	Entering a value smaller than 2 sets the number of
		individual characteristics.	points to the minimum value (2), entering a value greater than 21 sets the number of points to the
			maximum value (21).
			, ,
	1 HD 1	Parameters of individual characteristics	Possible settings: -19999999
	920 I	The number of points used to shape the individual	
		characteristics is determined by the PtS parameter. Based on the coordinates of successive points given	
		by the user, the meter determines (from the system of	
	1 H5 1	equations) the individual characteristics coefficients a	
	975 1	and b for the sections connecting successive points of the characteristics.	
		$\int dY 0 I = a_1 \cdot IH 0 I + b_1$	
		$\begin{cases} dY02 = a_1 \cdot IH02 + b_1 \\ yyo2 + yyo2 + b_1 \end{cases}$	
		$\int dY02 = a_2 \cdot IH02 + b_2$	
		$dY03 = a_2 \cdot IH03 + b_2$	
		$dY20 = a_{20} \cdot IH20 + b_{20}$	
		$\int dY21 = a_{20} \cdot IH21 + b_{20}$	
		(**************************************	
		where:	
		IH01IH21 – measured values	
		dY01dY21 – expected values	
	ŁYP6	Bar graph type	□nEE - one-colour bar graph
	22/2		/ ロヒァ – sectional bar graph
			SEct – segmented bar graph
			인 교는 - point bar graph
			上∟En - trend bar graph
ر			
Bar graph parameters b ^{Rr}		Pay wearb calcus	055 1 1 1
S	coLr	Bar graph colour	## DFF - bar graph off - red
er			9 - green
et			c€ - red + green
			Other colours available only in meters with a seven-
ā			colour bar graph
)a			b - blue -b - red + blue
			66 - green + blue
d			ເປັບ - red + green + blue
Lo			
5	brL	Lower threshold of bar graph indication	Possible settings: -19999999
a		Parameter for setting the "magnifying glass" on the	
		bar graph. The value on the display at which the bar graph is to be blanked.	
			Describle cottinge: 4000, 0000
	ЬгН	Upper threshold of bar graph indication Parameter for setting the "magnifying glass" on the	Possible settings: -19999999
		bar graph. The value on the display at which the bar	
		graph is to be fully illuminated.	


18	PrL	Lower alarm threshold	Possible settings: -19999999
AL	PrH	Upper alarm threshold	Possible settings: -19999999
Alarm parameters RL 1	ЕЗРЯ	Alarm type	$n \square n$ — normal on $n \square F$ — normal off $\square n$ — switched on $\square FF$ — switched off $n \square n$ — manually switched on; until the alarm type is changed, the alarm output is permanently switched on $n \square F$ — manually switched off; until the alarm type is changed, the alarm output is permanently switched off $n \square F$ — reaction to the slope
Alarr	dГЛ	Alarm delay The parameter is defined in seconds. Defines the time to elapse from the time of alarm occurrence to the time when alarm output is triggered. The alarm is activated after averaging the measurement. The alarm is switched off without delay.	Possible settings: 0.0999.9 s Entering 0.0 causes the alarm to be activated when it occurs.
	HOLd	Holding up alarm signalling When the function is switched on, after the alarm state has disappeared, the alarm remains activated (relay contacts or OC output). SThe alarm state is active until it is erased by the combination of and keys.	☐FF - alarm output hold up is disabled ☐n - alarm output hold up is enabled
	CurL	The colour of the lower alarm threshold marker	□FF - bar graph off
	EurH	The colour of the upper alarm threshold marker	r - red 5 - green r5 - red + green Other colours available only in meters with a seven- colour bar graph b - blue rb - red + blue 55 - green + blue r55 - red + green + blue
	dEr±	Value of change in the measured signal The change value of the signal measured at the time specified in parameter D_t. After exceeding the set threshold, the alarm is activated (relay contacts or OC output). Exceeding the threshold value increase in time is signalled by an intermittent message of the length of 1s on the display. ALX - Where x is the alarm number. Occurs in the case of a measured signal increase. ALx Where x is the alarm number. Occurs when the measured signal decreases. When the alarm stops, the message disappears.	Possible settings: -19999999 Entering positive values causes the alarm to be activated if the rate of change of the measured signal in the indicated time increases above the entered value dErt (the alarm reacts to the speed of the increase of the measured signal) Entering negative values causes the alarm to be activated if the rate of change of the measured signal in the indicated time decreases above the entered value dErt (the alarm reacts to the speed of the decrease of the measured signal) Entering the value 0 deactivates the deLt alarm function
	d_t	time of change in the measured signal	Possible settings: 03600 sec. Entering the value 0 deactivates the dELE alarm function


	Ι		
, out?	l ndO	Turning off or on individual characteristics	□ − characteristics on □FF − characteristics off With the characteristics turned off, the meter operates with a maximum range depending on Loln and Hiln input range
0.t 1 /	d_H 1	Parameters of the individual output characteristics	Possible settings: -19999999
S 0.0	0_91	Based on the coordinates of two points given by the user, the meter determines (from the system of	
eter	4_H2	equations) the individual characteristics coefficients a and b .	
aram	0_75	$ \begin{array}{c c} O_{Y1} = a \cdot d_{H1} + b \\ O_{Y2} = a \cdot d_{H2} + b \end{array} $	
ut pa	5232	(0 _12	
Output parameters		where: d_H1, d_H2 – displayed values O_Y1, O_Y2 – expected values on the output	
	ьЯud	RS-485 interface baud rate	2.4 – 2400 b/s 4.8 – 4800 b/s
			9.5 − 9600 b/s 19.2 − 19200 b/s
URILE			5 7.600 b/s 1 15.€ – 115200 b/s
S UF		Transmission method via RS-485 interface	055
Parameters	nodE	Transmission medica via No-400 mentace	OFF - interface off -B∩2 – RTU 8N2
aran			- 8E I − RTU 8E1
Pe			-80 I − RTU 801 -80 I − RTU 8N1
	Addr	Device address for MODBUS protocol	Possible settings: 1247
	E5E	Display and bar graph test The test consists in displaying the numbers 1111,	□□ – disabling the test
		2222, etc. on the displays. Subsequent points are lit on bar graphs in the available colours. The test	YE5 – enabling the test
		continues until it is turned off.	After activating, the test will start after exiting the menu.
	Ноиг	Setting the current time Time format: hh.mm	Possible settings: 00.00 23.59
SEr		The clock is reset after a voltage failure	
Service parameters !	SECU	Entering the password	Possible settings: -1999 9999 Setting the value to 0 disables the entry protection for the menu.
ara	ELTL	Erasing the minimum values	∩Ū – do not erase
rice p			УЕ5 – erasing the minimum values
Serv	[LrH	Erasing the maximum values	n□ – do not erase
			JE5 – erasing the maximum values
		_	
	dFLL	Restoring factory parameters of the meter.	□ – do nothing
			YE5 – restore factory parameters
	L		

	rEC	Enabling or disabling recording At the moment recording is enabled, the meter deletes the previous stored channel values.	□FF – recording off □Ec I – channel 1 recording on
ameters	Hr_ I	Recording start time Time format: hh.mm.ss	Possible settings: 00.00.00 23.59.59
	dA_ I	Recording start date Date format: yy.mm.dd	Possible settings: 00.01.01 99.12.31
ໄມໂr recording parameters	InE I	Time interval of recording Specifies the time segment after which the result is to be saved. The minimum interval is 1 second. Time format: hh.mm.ss	Possible settings: 00.00.01 24.00.00

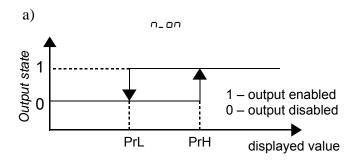

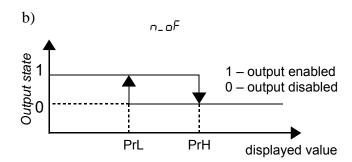

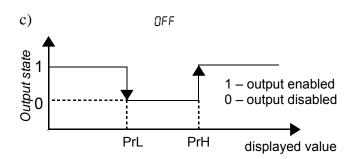

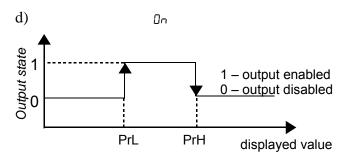

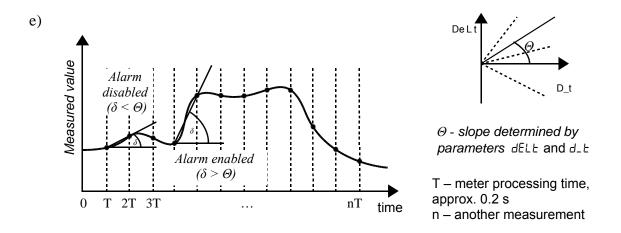


Fig. 10 Alarm types a, b - normal; c - switched off; d - switched on; e - delt

Caution: H_ Dn alarm is always active, H_ DF alarm is always inactive

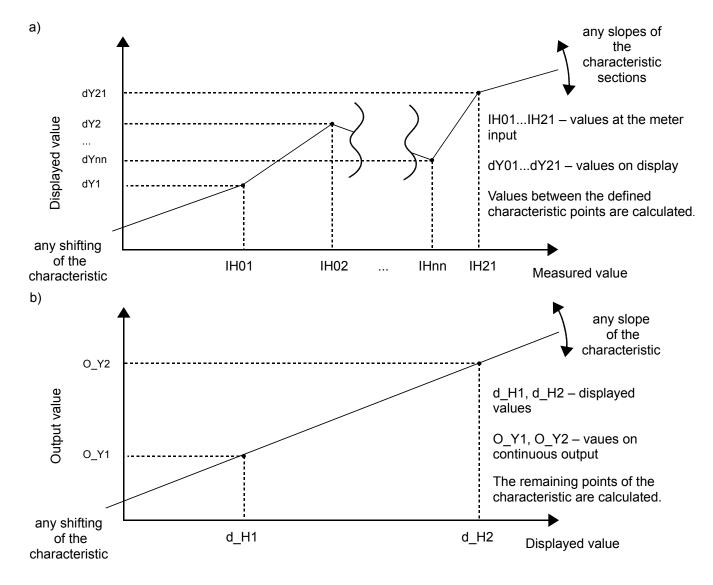


Fig. 11 Individual characteristics of the display a) and continuous outputs b)

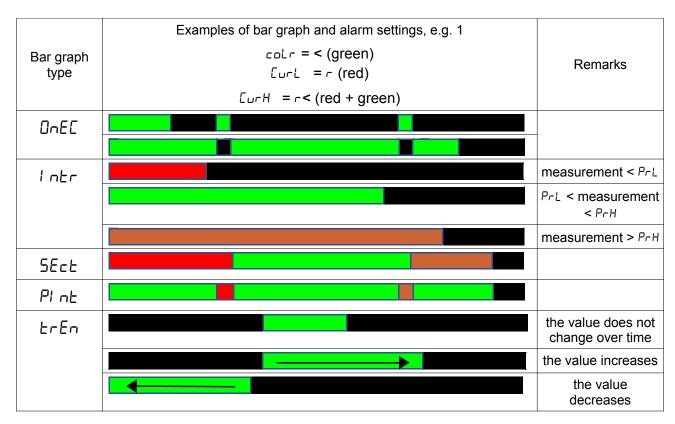


Fig. 12 Bar graph operation modes

Caution!

 the meter operates within the measurement range defined by the user in the LoIn and Hiln parameters. Outside the defined range, the meter signals exceeding the range.



- in the case of a meter with a resistance thermometer in a two-wire system, the choice of the option of automatic compensation of changes in the resistance of the wires will result in faulty operation of the meter and displaying the ErrE message.
- when individual display characteristics are switched on, the result is converted according to the sectional characteristics in accordance with the introduced parameters IH01 ... IH21 and dY01 ... dY21.
- when arithmetic functions and individual characteristics are switched on, the arithmetic operations are performed first and the result obtained is transformed by individual characteristics.
- when the individual characteristics for the analog output is switched on, the displayed value is linearly transformed according to the entered d_H1, d_H2 and O_Y1, O_Y2 parameters.
- the meter regularly controls the values of the entered parameter. If the entered value exceeds the upper or lower range of changes, the meter will not record the parameter.
- if the input type is changed, the decimal point is changed at the same time, optimally for the given input.
- after a power failure, the current time is reset.
- recording is switched off when:
 - it was disabled from the meter menu level
 - the input type was changed
 - the recording start time was changed
 - the recording interval was changed
 - setting the averaging time for the Ent measurement to 0
 - memory full
 - power on the meter

- on a bar graph working in Inter or 5Ect mode, it is possible to set only one Eurt and EurH alarm markers (from one alarm). Setting markers for the selected alarm activates them on the bar graph and automatically disables the markers from other alarms assigned to the same measurement channel.
- the max and min values are erased in case of change of
 - Input type
 - individual characteristics (on, off)
 - restoring factory parameters

Parameter description	Factory parameter	Parameter description	Factory parameter		
FAL	nnAL	HOLd	oFF		
Un ıE	.С	EUrL	.		
Lalin	- 1999	СИ-Н	г [.		
Hiln	9999	dErt	8.8		
Func	oFF	d_Ł	8		
Eon	0.0	i ndO	oFF		
d_P	Ruto	d_H I	8.8		
Ent	t0	0_A I	0.0		
l ndl	oFF	9 ⁻ H5	8.8		
PE5	2	07.45	8.8		
I HO I	0.0	ьЯид	1 15.2		
490 I	0.0	nodE	r8n I		
		Addr	1		
HH2 I	0.0	£5£	nD		
975 1	0.0	HoUr	00.00		
E Y P B	5Ect	SECU	0		
coLr	oFF	[LrL	nD		
brL	- 1999	[LrH	nD		
ЬгН	9999	dFLL	nD		
PrL	- 1999	rEC	oFF		
PrH	9999	Hr_ 1	2400.00		
E Y P A	n_on	dA_ 1	16.0 (0 1		
qr A	0.0	Int I	15.00		

CAUTION: Restoration of factory parameters is possible by holding down all the keys when the power is turned on and holding them down for about 2 seconds, and then releasing them.

6. RS-485 Interface

The digital programmable NA5Plus meters have a serial link in the RS-485 standard for communication in computer systems and with other devices that perform the Master function. The MODBUS communication protocol has been implemented on the serial link. The data transmission protocol describes methods of information exchange between the devices through the serial link.

6.1. Serial interface connection method

The RS-485 interface allows direct connection of up to 32 devices on a single link of the length of up to 1,200 m. To connect more devices, it is necessary to use additional intermediary-separating systems.

Interface line outputs are shown in Fig. 3 of this manual. To obtain correct transmission it is necessary to connect lines A and B in parallel with their equivalents in other devices. The connection must be made with a shielded conductor and the shield must be connected to the protective terminal at a single point. The GND line is used for additional protection of the interface line for long connections. GND signals should be connected between the devices and at one point to the protective terminal (this is not necessary for correct operation of the interface).

To obtain a connection with a PC, a converter from available computer interfaces to RS-485 is necessary, e.g. RS-232 to RS-485 (PD5 from LUMEL SA), USB to RS-485 (PD10 from LUMEL SA) or a dedicated RS-485 interface card installed in the computer.

The marking of transmission lines for the card in the PC depends on the card manufacturer and should be included in the instruction manual of the card.

6.2 MODBUS protocol

List of serial link parameters for the MODBUS protocol:

address of the meter 1...247

baud rate
 2400, 4800, 9600, 19200, 57600, 115200 bit/s
 operating mode
 RTU 8N1, RTU 8N2, RTU 8E1, RTU 8O1

maximum response time
 500 ms

The configuration of the serial link parameters consists in determining the baud rate (bAud), device address (Addr), and operating mode (nodE).

Caution: Each meter connected to the communication network must:

- have a unique address
- the same baud rate and operating mode

6.3 Description of the MODBUS protocol functions

The following functions of the MODBUS protocol have been implemented in the NA5Plus meters:

Code	Meaning						
03 (03 h)	readout of n-registers						
06 (06 h)	recording of a single register						
16 (10 h)	recording of n-registers						
17 (11 h)	slave device identification						

Readout of n-registers (code 03h)

This function is not available in the publication mode.

Example. Readout of 2 registers, starting with the register addressed 1DBD (7613)

Request:

Device address	Function				Number of registers Lo	
01	03	1D	BD	00	02	52 43

Response:

Device address	Function	Number of bytes		Value from register 1DBD (7613)		•					Checksum CRC
01	03	80	00	00	00	00	00	00	00	00	95 D7

Record of values into the register (code 06h)

This function is available in the publication mode.

Example. record of the register addressed 1DBDh (7613)

Request:

Device address	Function	Register addres Hi	Register addres Lo		ue fror DBD h	_		Checksum CRC
01	06	1D	BD	3F	80	00	00	85 AD

Response:

ĺ	Device	Function	Register addres	Register	Valu	e from r	egister	1DBD	Checksum
	address		Hi	addres Lo		h (7	'613)		CRC
	01	06	1D	BD	3F	80	00	00	85 AD

Record into n-registers (code 10h)

This function is available in the publication mode.

Example. Recording 2 registers, starting from the register addressed 1DBD h (7613)

Request:

evice dress	Fun ction	_	ister ress	C	nber of sters	Number of bytes		Value from register 1DBD h (7613)		Value from register 1DBE h (7614)				Checksum CRC	
		Hi	Lo	Hi	Lo										
01	10	1D	BD	00	02	80	3F	80	00	00	40	00	00	00	03 09

Response:

Devic	-	Register addres Hi	Register addres Lo	Number of registers Hi	Number of registers Lo	Checksum CRC
01	10	1D	BD	00	02	D7 80

Device identification (code 11 h)

Example. Readout of data identifying a device for NA5Plus meter

Request:

Device address	Function	Checksum CRC
01	11	C0 2C

Response:

Device address	Function	Number of bytes	Device ID	State of the device	Field depending on device type	Checksum CRC
01	11	19	E1	FF	xxxxxxxxxx	

Device address - depending on the setpoint

Function - function no. (11 h)

Number of bytes - 19 h
Device ID - E1 h
Device state - FF h

Field depending on device type - device name

- software version

6.4 Map of NA5Plus meter registers

Address range	Value type	Description
7000	float (32 bits)	Value is placed in two successive 16-bit registers. Registers contain the same data as 32-bit registers of 7500 range. Registers are read-only.
7100	float (32 bits)	Value is placed in two successive 16-bit registers. Registers contain the same data as 32-bit registers of 7700 range. Registers can be read out and recorded.
7200	float (32 bits)	Value is placed in two successive 16-bit registers. Registers contain the same data as 32-bit registers of 7600 range. Registers can be recorded and read out.
7320	float (32 bits)	Value is placed in two successive 16-bit registers. Registers contain the same data as 32-bit registers of 7660 range. Registers can be read out and recorded or only recorded.
7500	float (32 bits)	Value is placed in 32-bit register. Registers are read-only.
7600	float (32 bits)	Value is placed in 32-bit register. Registers can be recorded and read out.
7660	float (32 bits)	Value is placed in 32-bit register. Registers can be read out and recorded or only read ut.
7700	float (32 bits)	Value is placed in 32-bit register. Registers can be recorded and read out.

6.5 Registers for recording and reading.

Value is placed in two successive 16-bit registers. These registers contain the same data as 32-bit registers of 7600 area.	Value is placed in 32-bit registers.	Symbol	Writing (w)/ readou t(r)	Range		Description
7200	7600	ldentifier	o	_	Value	device identifier
					226	NA5Plus
7000	7004	Channel	/	•	\/-I	Number of the meter channel
7202	7601	number	w/r	0	Value	Channel 4
-					0	Channel input type
					Value	Channel input type
					Value	D4400 DTD
					0	Pt100 RTD
					1	Pt500 RTD
					3	Pt1000 RTD
						J thermocouple
					<u>4</u> 5	K thermocouple N thermocouple
					6	E thermocouple
7004	7000	Imm4 4	,	0 40	7	R thermocouple
7204	7602	Input type	w/r	016	8	S thermocouple
1					9	T thermocouple
					10	Resistance measurement up to 10 k Ω
					11	Voltage measurement up to ± 75 mV
					12	Voltage measurement up to ± 70 mV
1					13	Voltage measurement up to ± 10 V
					14	Voltage measurement up to ± 600 V
					15	Current measurement up to ± 40 mA
1					16	Current measurement up to ± 5 A
				1000		Lower value of the input range
7206	7603	Loln	w/r	-1999 9999		n! Changing the input type assigns standard
<u> </u>				3333	,	values to the LoIn and HiIn variables.
7208	7604	Hiln	w/r	-1999 9999		Upper value of the input range

		Г			1	0 " (")
					Mel	Operation function on channel
					Value	Cuitabad aff
					0	Switched off
					1	Squaring Extraction of roots
7210	7605	Function	w/r	07	2	
					3	Re-recording from the channel
					4	Addition of channels
					5	Subtraction of channels
					6	Multiplication of channels
					7	Division of channels
7212	7606	тс	w/r			Compensation of joints temperature °C
1212	7606	compensation	W/I	0.0999.9		n: entering values outside the range of 0°C will enable automatic compensation.
						Compensation of wire resistance in Ω
7214	7607	Pt	w/r	0.0999.9		n: entering a value outside the range of
''-'-	7007	compensation	VV /1	0.0000.0		0.0Ω will enable automatic compensation.
					0.0	Channel decimal point
					Value	
					0	0000
7216	7608	D_P	w/r	04	1	000.0
'210	7000	5	VV /1	0	2	00.00
					3	0.000
					4	Auto
7218	7609	Cnt	w/r	0999.9		Channel measurement time
7210	7000	One	VV/1	0000.0	Numl	per of the channel Individual characteristics
7220	7610	IndiPts	w/r	221	l Mann	points
1 = 1						Channel individual characteristics
					Value	Charmor marviadar onaracteriorios
7222	7611	IndiOn	w/r	01	0	Characteristics off
					1	Characteristics on
						Temperature unit used in calculation
					Value	
7224	7612	Unit	w/r	01	0	Degrees Celsius °C
					1	Degrees Farenheit F
7226	7613	Reserved	-	_		Reserved value
						Bar graph number
7228	7614	Bar graph	w/r	0	Value	J 2 p 2 2 2 2
		number			0	Bar graph of channel 1
					_	Bar graph type
					Value	- O'
					0	One-colour (OnEC)
						Change of colour after
					1	exceeding the alarm threshold
		Rar graph				(the whole bar graph colour changes) (Intr)
7230	7615	Bar graph type	w/r	04		Change of colour after
		type			2	exceeding the alarm threshold
						(three-segment change of
						colour) (SEct)
					3	One-colour bar graph, alarm
						markers in another colour (PInt)
	=0.1-			<u> </u>	4	Increasing/decreasing trend (trEn)
7232	7616	Colour	w/r	07		Bar graph colour
					Value	
					0	Bar graph off (OFF)
					1	Red (r)
					2	Green (G)
					3	Red + Green (rG)
						alues are only available in meters with RGB
1					diodes	

	I	<u> </u>		1	1 .	DI (I)
					4	Blue (b)
					5	Red + Blue (rb)
					6	Green + blue (Gb)
					7	Red + Green + Blue (rGb)
				-1999		
7234	7617	Brl	w/r	9999	"Ma	gnifier" on the bar graph Lower threshold
				-1999		
7236	7618	Brh	w/r	9999	"Ma	gnifier" on the bar graph Upper threshold
						Choice of alarm number
7238	7619	Alarm no.	w/r	07		of changes depends on the
						ersion code (number of alarms)
					C	hannel number to which the alarm is to
7240	7620	Ch_Alarm	w/r	0		react <alarm no.=""></alarm>
' - '	7 020	011_7 (101111	**/.		Value	
					0	Channel 1
				-1999		
7242	7621	Prl	w/r	9999		Alarm lower threshold < Alarm no.>
				-1999		
7244	7622	Prh	w/r	9999		Alarm upper threshold < Alarm no.>
						Alarm type < Alarm no.>
					Value	
					0	Normal Switched on
					1	Normal Switched off
7246	7623	Тур	w/r	06	2	Switched on
		j.			3	Switched off
					4	Manual switched on
					5	Manual switched off
					6	Response to slope
7248	7624	Alarm delay	w/r	0999.9		Alarm delay < Alarm no.>
12.0	. 02 :	7 tidi iii dolay	••/	0000.0	Hol	ding up the alarm signaling < Alarm no.>
		Holding up			Value	
7250	7625	the alarm	w/r	01	0	Hold up off
					1	Hold up off
					'	Bar graph colour to the lower alarm
						threshold <alarm b="" no.<="">></alarm>
					Value	unconoid salarii nos
					Value	
		! I			l 0	Bar graph off (OFF)
	l				0	Bar graph off (OFF)
					1	Red (r)
7050	7606	CUDI	/=	0.7	1 2	Red (r) Green (G)
7252	7626	CURL	w/r	07	1 2 3	Red (r) Green (G) Red + Green (rG)
7252	7626	CURL	w/r	07	1 2 3 Other v	Red (r) Green (G)
7252	7626	CURL	w/r	07	1 2 3 Other v	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b)
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb)
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb)
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb)
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6 7	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb)
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6 7	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold < Alarm no.>
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6 7 Value 0	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF)</alarm>
7252	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6 7 Value 0 1	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r)</alarm>
					1 2 3 Other v diodes 4 5 6 7 Value 0 1 2	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G)</alarm>
7252 7254	7626	CURL	w/r	07	1 2 3 Other v diodes 4 5 6 7 Value 0 1 2 3	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G) Red + Green (rG)</alarm>
					1 2 3 Other v diodes 4 5 6 7 Value 0 1 2 3 Other v	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G)</alarm>
					1 2 3 Other v diodes 4 5 6 7 Value 0 1 2 3 Other v diodes	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB</alarm>
					1 2 3 Other v diodes 4 5 6 7 Value 0 1 2 3 Other v diodes 4	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b)</alarm>
					1 2 3 Other v diodes 4 5 6 7 Value 0 1 2 3 Other v diodes 4 5 5 5 6 7	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb)</alarm>
					1 2 3 Other v diodes 4 5 6 7 Value 0 1 2 3 Other v diodes 4	Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b) Red + Blue (rb) Green + blue (Gb) Red + Green + Blue (rGb) Bar graph colour after exceeding the upper alarm threshold <alarm no.=""> Bar graph off (OFF) Red (r) Green (G) Red + Green (rG) alues are only available in meters with RGB Blue (b)</alarm>

Table Tabl	7256	7628	dErt	w/r	-1999	V		in the measured signal
Table Tabl	7258	7620	d t	\\/r		Time of		
	7230	1029	<u>u_t</u>	VV/I	03000			
			Output	,			0.000.011 01 1.10	catput to be comigared.
	/260	7630		w/r	01		0	Output no. 1
Change C							1	
Table Tabl								
Test				_			<0	utput no.>
Table Tabl	7262	7631	Chna	w/r	01		01	
Note								
Test						-		
Test								liacteristics Cutput IIO.
1 Characteristics on	7264	7632	characteristi	w/r	01		Characteristic	s off
Table Tabl			cs					
Test					-1999	Ar		
	7266	7633	X1 LED	w/r	9999			
Table Tabl						Ar	• .	•
7270	7268	7634	Y1 Out	w/r				
Table Tabl	7070	7005	V0 1 ED	,		Ar		
	12/0	7635	X2 LED	W/r		Λ.		
RS-485 interface baud rate Wir O2	7272	7636	Y2 Out	w/r		Ai		
Table Tabl	1212	7000	12 000	VV/I	3333			
Test						Value	110 100 111	norrado sada rato
Test							2400 bit/s	
Total Part P	7074	7007	David nata	/		1		
Test	/2/4	/63/	Baud rate	W/r	02	2	9600 bit/s	
Total Parameter is displayed with four places after the decimal point in format hh,nmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect it automatically. Total Parameter is displayed with four places after the decimal point in format hh,nmss, when it is entered, the indicator will correct it automatically.								
Total Process								
Total Process						5		
7276						\/-I	MODBUS pro	tocol operation mode
Total Tota			0				DTU ONO	
7278 7639 Address W/r 0247 Device address selection Measured value recording	7276	7638		w/r	17			
Total Properties Total Properties Total Properties			Illoue					
7278 7639 Address w/r 0247 Device address selection 7280 7640 Recording W/r 01 Measured value recording 7282 7641 Interval W/r 0 99.5959 Time interval of recording 7284 7642 Recording tart time This parameter is displayed with four places after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038 Year of recording start								
Total Recording W/r Total North of recording North of recording	7278	7639	Address	w/r	0247			ddress selection
7282 7641 Interval W/r 99.5959 Time interval of recording Recording time 7284 7642 Recording time Recording time W/r 0 1 Recording from channel 1 7285 7641 Interval W/r 0 23.5959 Recording start time This parameter is displayed with four places after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038 Month of recording start								
7282 7641 Interval w/r 99.5959 Time interval of recording Recording start time This parameter is displayed with four places after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year w/r 1970 2038 Month of recording start	7290	7640	Pocording	\4/r	0 1	Value		
7284 7642 Recording time Recording time W/r 7284 7642 Recording time W/r 7284 7642 Recording time O 23.5959 Recording start time This parameter is displayed with four places after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. Year of recording start Year of recording start	1 200	1 040	ivecoluling	VV/1	J U I			
7284 7642 Recording time W/r 99.5959 Recording start time This parameter is displayed with four places after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038 Month of recording start						1	Recording from	m channel 1
7284 7642 Recording time W/r 23.5959 This parameter is displayed with four places after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038 Month of recording start	7282	7641	Interval	w/r			Time inte	erval of recording
7284 7642 Recording time W/r 23.5959 Dlaces after the decimal point in format hh,mmss, where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038 Month of recording start								
7284 7642 Recording time W/r 23.5959 Where: hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038								
7284 7642 Recording time W/r 23.5959 hh - means hours, mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. 7286 7643 Year W/r 1970 2038 Month of recording start							after the decima	al point in format hh,mmss,
mm - means minutes, ss - means seconds When incorrect time is entered, the indicator will correct it automatically. Year w/r 1970 2038 Month of recording start	7204	7640		vaile		I	ane houre	
ss - means seconds When incorrect time is entered, the indicator will correct it automatically. Year of recording start Month of recording start	1 204	1042	time	VV/1	23.5959			
7286 7643 Year w/r 1970 When incorrect time is entered, the indicator will correct it automatically. Year of recording start Month of recording start								
7286 7643 Year w/r 1970 Year of recording start Month of recording start						1		entered, the indicator will
7286 7643 Year W/r 2038 Month of recording start							it automatically	
7280 7643 Year W/F 2038 Month of recording start					1970		Year of	recording start
Month of recording start	7286	7643	Year	w/r				
7288 7644 Month w/r 112	<u> </u>						Month	f recording start
	7288	7644	Month	w/r	112		IVIOITUI O	

Γ		T		I	I	Day of reco	ordina start
					Parame		and Day are information
7290	7645	Day	w/r	131		ters (they are not u	
						ng start date).	oca to opcomy and
						Display and b	ar graph test
7202	7646	Toot	/		Value		•
7292	7646	Test	w/r	01	0	No operation	
					1	Test	
						Currer	
						rameter is displaye	
						after the decimal po	oint in format hh,mmss,
7294	7647	Hour	w/r	0	where:	ans hours,	
'234	1041	lioui	VV/1	23.5959		eans minutes,	
					1	ans seconds	
					When in	ncorrect time is ente	ered, the indicator will
					correct	it automatically.	
						Erasing the m	inimum value
7296	7648	Erasing	w/r	01	Value	NI C	
		minimum			0	No operation	
					1	Erasing the man	ovimum valua
		Eracina			Value	Erasing the ma	axiiiluiii value
7298	7649	Erasing maximum	w/r	01	0	No operation	
		maximam			1	Erasing	
7300	7650	Reserved	_	_	<u>'</u>	Lidonig	
7302	7651	Reserved	-	-			
		Do of order			ı	Restoring factory se	ettings of the meter.
7304	7652	Restoring factory	w/r	01	Value	-	
7304	7032	settings	VV/I	01		0	No operation
						1	Restoring
		Menu			The	meter menu passw	ord readout or entering.
7306	7653	access	w/r	09999			leletes the password.
		password					
7308	7654	Software	0			Displays the softw	
		version Year of the		1970		MAJOR*100+N	
7320	7660	saved value	w/r	2038		Year of the saved	value in memory
7222	7664	Month of the	14.10			Month of the access	d value in marrar
7322	7661	saved value	w/r	112		Month of the saved	a value in memory
7324	7662	Day of the	w/r	131		Day of the saved	value in memory
<u> </u>		saved value					<u> </u>
					Thio no	Time of the saved rameter is displayed	j
							o with four pint in format hh,mmss,
7200	7600	Time of the	,,,,	0	where:	and the decimal pe	ioimat iii,iiiiioo,
7326	7663	saved value	w/r	23.5959		ans hours, mm – m	eans minutes,
					1	ans seconds	
							ered, the indicator will
		Index of the				it automatically.	
7328	7664	saved value	w/r	1800		Number of the save	ed value in memory
						Operation statu	is at the buffer
						Value	
				0	No operation		
7330	7330 7665 Status w	w/r	07			Searching acc. date and	
						1	time (registers no.
							76607663 and 73207326)
<u> </u>	l	<u> </u>		<u> </u>			10201020)

				I	1 0	10 1: "
					2	Searching acc. time (registers no. 7663 and
						7326)
					3	Searching acc. index
						(registers no. 7664 and
						7328)
					4	Load next values into
						the buffer (registers
						76727691 and
						73447382)
					5	Load previous values into the buffer
						(Registers 76727691
						and 73447382)
					6	Go to the first saved
						value in memory.
					7	Go to the last saved
7000	7000	N			N	value in memory.
7332	7666	Number of the saved	0	0800		ue in memory, placed in the first
		value			Value	ster of the buffer
		Value			O	Memory is empty
					1800	Number of the saved value
7334	7667	Number of	0	020		ecorded buffer registers
		recorded			Value	
		registers			0	Buffer is empty
					120	Number of recorded
						registers
7336	7668	Year	0	1970 2038	Year for the	value in the first register
7338	7669	Month	0	112	Month for the	value in the first register
7340	7670	Day	0	131		value in the first register
7342	7671	Time	0	0		value in the first register
				23.5959	This parameter is dis	
					1 -	mal point in format hh,mmss,
					where:	
					hh - means hours, mm - means minutes	,
					ss - means seconds	,
7344	7672	Buffer	0	_		read out from the memory
					20 registers , includir	
7382	7691				, , , , ,	

Value is placed in two successive 16-bit registers. These registers contain the same data as 32-bit registers of 7700 area.	Value is placed in 32-bit registers.	Symbol	Writing (w)/ readou t(r)	Range	Description
7100- 7140	7700- 7720	X values	w/r	-1999 9999	X values of the device individual characteristics
7142- 7182	7721- 7741	Y values	w/r	-1999 9999	Y values of the device individual characteristics

6.6 Read-only registers

	u-only i	egisters			
Value is placed in two successive 16-bit registers. These registers contain the same data as 32-bit registers of 7500 area.	Value is placed in 32-bit registers.	Name	Writing (w) /readout (r)	Unit	Unit name
7000	7500	Identifier	0	_	Constant identifying the device
7002	7501	Status	0	_	Register describing the current state of the meter
7004	7502	Serial number	0	_	Register containing serial number of the meter
7006	7503	Control1	0	%	Register defining the control procedure of the analog output 1
7008	7504	Control2	0	%	Register defining the control procedure of the analog output 2
7010	7505	Min	0	_	Minimum value of the currently displayed value
7012	7506	Max	0	_	Maximum value of the currently displayed value
7014	7507	Vaule			Currently measured value
7016	7508	Hour			Current time
7018	7509	Reserved	_	_	_
7020	7510	Reserved		_	_
7022	7511	Reserved	_	_	

Register description Status:

	_				-																											
	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х	х
bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

Bit-26 Reserved Bit-25 Reserved

Bit-24 Signalling of the displayed value

upper exceeding

0 – no error

1 – value exceeding

Bit-23 Signalling of the displayed value

lower exceeding

0 – no error

1 – exceeding of value

Bit-22 Binary outputs type

0 – 4 relay outputs

1 – 8 OC outputs

Bit-21 Bar graph type

0 – two-colour RG Bit-9...8 FRAM memory status

1 – seven-colour RGB 00 – no errors
Bit-20 Reserved 01 – memory full
Bit-19 Reserved 10 – memory damaged
Bit-18 Reserved Bit-7 Alarm 8 status

Bit-17 Error of the conductor resistance 0 – off **compensation** 1 – on

0 – no error Bit-6 Alarm 7 status
1 – signalling of the compensation error 0 – off

1 - signalling of the compensation error 0 - off **Bit-16 Signalling of the upper range** 1 - on

exceeding of the upper range 1 – on Bit-5 Alarm 6 status

0 – normal operation 0 – off 1 – range exceeding 1 – on

Bit-15 Signalling of the lower range Bit-4 Alarm 5 status

exceeding 0 - off 0 - normal operation 1 - on

1 – range exceeding Bit-3 Alarm 4 status

Bit-14...13 Analog output type 2 0 – off 00 – none 1 – on

01 – current Bit-2 Alarm 3 status

10 – voltage 0 – off **Bit-12...11 Analog output type 11** 1 – on

00 – none Bit-1 Alarm 2 status

01 – current 0 – off 10 – voltage 1 – on

Bit-10 Calibration status Bit-0 Alarm 1 status

0 – meter not calibrated 0 – off 1 – meter calibrated 1 – on

7. Meter configuration with E-Con software

NA5Plus meter can be configured using the E-Con software. This program is a free application available on the manufacturer's website (www.lumel.com.pl). The meter should be connected to PC via RS485 interface. After starting the program, select the serial port to which the meter is installed. Available serial ports and connection configurations are available in the "Communication" tab.

When connected via the RS485 interface, set the following transmission parameters: the address (device ID), the speed and mode. Factory settings of RS485 interface are as follows: Address 1, speed 15200, mode RTU 8N1.

After setting the parameters, select the "connect" key.

Before changing the configuration of the meter, it is advisable to read and save the current configuration to a file to be able to restore the previous configuration. From e-Con application menu it is possible to save the configuration to a file, to read the file and also export the configuration to a pdf file.

After connection, e-Con automatically read the current configuration from the device. The parameters available for configuration, as well as a preview of the currently measured values at the inputs, are available in the right part of the main program window.

8. METER PROGRAMMING EXAMPLES

Example 1. Programming of individual characteristics.

We want to program the meter so that the measured value 4.00 mA corresponds to the value 0 on the display, while the measured value 20.00 mA corresponds to the value 100. To do this:

- set the display precision to 0000 (parameter $d_{\perp}P = 0000$)
- enable individual characteristics (parameter $| \neg d | = \square \neg$)
- set the number of characteristics points to 2 (parameter P = 2)
- set the point | H□ | = 4.00 and dy□ | = 0
- set the point | HD2 = 20.00 and d GD2 = 100

Example 2. Programming of the reverse individual characteristics.

If we want to program the meter so that the measured value 4.00 mA corresponds to the value 120.5 on the display, and the measured value 20.00 mA to value 10.8, we should:

- set the display precision to 000.0 (parameter $d_P = 000.0$
- enable individual characteristics (parameter i ndi = □n)
- set the number of characteristics points to 2 (parameter Pt5 = 2)
- set the point | H□ | = 4.00 and dy□ | = 120.5
- set the point | H02 = 20.00 and d902 = 10.8

Example 3. Programming the alarm with hysteresis

If we want to program the alarm 1 operation so that at the value of 850 °C for the input the alarm is switched on and at 100 °C it is switched off:

- set the lower alarm threshold 1 to 100 (PrL = 100)
- set the upper alarm 1 threshold to 850 (PrH = 850)
- set alarm type 1 as normally enabled (parameter ŁℲPR = ¬¬¬¬¬)

Example 4. Programming the alarm in a desired interval with a delay

If we want to program the alarm 1 operation so that it is switched on in the range of 100 V to 300 V for the input, but with a delay of 10 seconds, then:

- set the lower alarm threshold 1 to 100 (PrL = 100)
- set the upper alarm 1 threshold to 300 (PrH = 300)
- set alarm type 1 as normally enabled (parameter type = $\square \cap$)
- set the alarm 1 delay to 10 seconds (parameter dLy = 1□)

If the alarm condition lasts longer than 10.0 seconds, the meter will activate the alarm output.

Example 5. Analog output programming

If we want to program the current output of the meter so that the measured value of 0.00 mA for the input corresponds to 4.00 mA on the output, while the measured value 20.00 mA corresponds to 20.00 mA, we should:

- enable individual characteristics for the output (parameter $! \cap d\Omega = \Omega \cap$)
- set the first point of the characteristics: d_H I = 0.00, □_Y I = 4.00
- set the second point of the characteristics: $d_{\perp}H_{\parallel}^{2} = 20.00$, $Q_{\perp}H_{\parallel}^{2} = 20.00$

Example 6. Bar graph programming

If we want to program the bar graph 1 as a sector - the red colour between the PrL and PrH parameters:

- for the bar graph, set the LYPb = 5Ect parameter
- for the bar graph set the $coL_r = r$ parameter

Example 7. Programming the magnifier on the bar graph

If we want to program the bar graph to be blanked for the value 0, and for the value 150 to be fully lit, we should:

35

- for the bar graph, set the brL = 0 parameter
- for the bar graph, set the $b_c H = 150$ parameter

Example 8. Recording programming

If we want to program the recording of the input every 20 seconds from 12:30, we should:

- set the recording date and time for input 1 (parameters Hr_ 1, dR_ 1)
- set the input 1 recording interval to 20 seconds (parameter | nt |)

9. BEFORE YOU REPORT A DEFECT

In the case of improper operation of the meter, verify the fault in the following table:

Symptom	Procedure
There are no indications on the display, the bar graph indicates nothing.	Check the meter power supply connection
The display shows the time, e.g. H_12 alternately with 20:43	The averaging time Cnt = 0 has been introduced, the meter operates in sleep mode and displays the current time
The display shows the characters:	Check the correctness of the input signal connection. See the service manual. Check also the setting of parameters D_P, Ind, LoIn and Hiln.
A signal that does not meet our expectations appears on the analog output of the meter	Check if the resistance of the analog output is in accordance with the technical data. Check if the individual characteristics for the output is not switched on. If necessary, change the parameters of the characteristics or enter factory parameters.
It is not possible to enter the programming mode, request for an access code	The programming mode is password protected. You must enter the correct password. If the user has forgotten the password, please contact the service
It is not certain whether all segments of the display or bar graph are in working order	Enter the meter menu and enable the test of displays and bar graphs. The character fields are lit successively from 0000 to 9999, at the same time the subsequent colours of bar graphs are lit. If any display segment or bar graph point does not light, report the fault to the nearest service centre
While navigating the meter's menu, the parameter values that do not match the scope of their changes appear on the display.	Enter the meter menu and reset the meter to its factory settings.
The display shows a result that is not in line with our expectations	Check if the individual characteristics is not switched on. If necessary, restore the meter factory parameters.

The bar graph does not work as we expect	Check the parameters of the bar graph. In case of further incorrect operation, restore the meter factory parameters and perform a display test.
Despite exceeding the alarm threshold, the alarm relay does not turn on	Check and if necessary correct the value of the alarm delay.
Instead of displaying the measurement result, the meter displays the parameter symbol and its value	The meter operates in the parameter preview mode or in the programming mode. Press the cancel key.
A delay in the activation of the alarm was introduced, e.g. 30 s, but the alarm did not work after this time	The duration of the alarm occurrence condition was shorter than the programmed one, i.e. the alarm condition subsided before the delay time elapsed. In this case, the meter starts counting down the time from the beginning
The meter does not establish communication with the computer via the RS-485 interface	Check if the interface cables (A, B, GND) have been correctly connected and then check the interface parameters in the meter menu. These parameters must be compatible with those in the software used

10. SOFTWARE UPDATE

The meter software update can be done via a PC with installed free e-Con program. e-Con program and the current update file are available on the website www.lumel.com.pl. Update can be performed via the RS-485 interface.

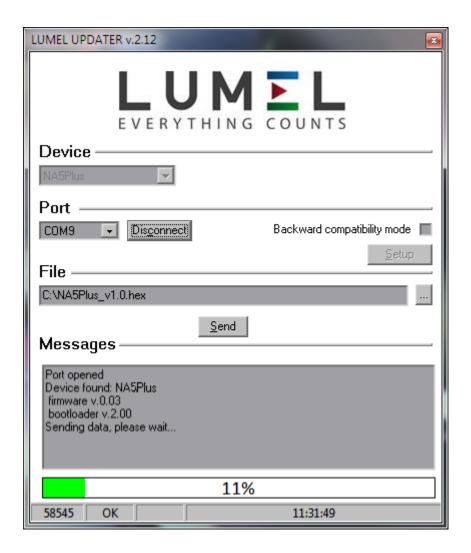


Fig 13: Software update

Caution! It is recommended that before updating the meter software, the user should read and save the current configuration of the meter to a file.

After starting the e-Con, set the communication parameters in the *Communication* field on the left side of the main window, then select *Connect*. The meter will be automatically recognized.

When communication is established it is recommended to read the current configuration of the module and save it to a file. for later restoration.

Then select *Firmware Update* on the right side of the program menu. LUMEL UPDATER (LU) will be launched (Fig. 16). NA5Plus meter is supported by LU starting from version 2.09. Select the device (NA5Plus) in the program, the port on which the device is installed in Windows, set the appropriate transmission parameters (115200, 8n1) in the access window under *Setup*, and indicate the update file. Then establish connection using *Connect* button. The Messages window

displays information about the detected device and the update progress. After the meter is properly detected by LU, you must start the update by selecting *Send* button. LU will show the update progress bar with percentage information, and the NA5Plus meter will indicate the updating process on the display throughout the update. After the update is completed, the meter will restart, restore factory parameters and start normal operation. LU message window will display *Done* and the meter update duration. LU program can be closed and then we can read the previous configuration from the file and save it to the meter using e-Con.

Caution! If the connection is interrupted or the power is turned off while updating the meter software, it may cause permanent damage to the device.

11. TECHNICAL DATA

Input:

Pt100	(-200850) °C
Pt500	(-200850) °C
Pt1000	(-200850) °C
J (Fe-CuNi)	(-1001100) °C
K (NiCr-NiAl)	(-1001370) °C
N (NiCrSi-NiSi)	(-1001300) °C
E (NiCr-CuNi)	(-100850) °C
R (PtRh13-Pt)	(01760) °C
S (PtRh10-Pt)	(01760) °C
T (Cu-CuNi)	(-50400) °C

Resistance measurement $0...5 \text{ k}\Omega$

Current measurement -5...5 A input resistance 10 m Ω ±10 %

 $< 400 \mu A$

Current flowing through the resistance thermometer:

Resistance of conductors linking the resistance thermometer

with the meter: $< 20 \Omega$ /wire

Thermocouple characteristics according to EN 60584-1

Resistance thermometer characteristics acc. IEC 751+A1+A2

Outputs:

Analog outputs galvanically isolated

- additional error due to ambient

temperature changes ±(0.1 % of the range / 10 K)

Relay outputs

4 relays; potential free - make contacts, maximum load:

voltage
 current
 resistive load
 250 V AC/ 150 V DC
 5 A 30 V DC, 250 V AC
 1250 VA. 150 W

Transistor:

- 8 open collector (OC) outputs, maximum load:

voltagecurrent5...30 V DC25 mA DC

Digital:

- interface RS-485

protocoltransmission typeMODBUS RTU8N2, 8E1, 8O1, 8N1

baud rate
 2400, 4800, 9600, 19200, 57600, 115200 b/s,

maximum response time 500 ms

Additional supply output 24 V DC, maximum load 30 mA

Memory parameters:

 meter memory (recording) 800 samples (input 1 or input 2), or 400 samples (channel 1) + 400 samples (channel 2)

min. recording interval1 s

Basic error: 0.1% of measuring range @1 digit

0.2% of measuring range @1 digit (for thermocouples R, S, T)

Additional errors in rated operating conditions:

compensation of reference joints

temperature changes ≤ ±1 °C

compensation of lead resistance changes

when the resistance of conductors is changed, < 10 Ω $\leq \pm 0.5$ °C when the resistance of conductors is changed, < 20 Ω $\leq \pm 1$ °C

- from ambient temperature changes $\leq \pm (0.1 \% \text{ of the range } / 10 \text{ K})$

Averaging time: ≤0.5 s (default)

Nominal operating conditions:

- supply voltage 95...253 V AC40..400 Hz; 90...300 V DC

20...40 V AC40...400 Hz, 20...60 V DC

- ambient temperature -10...<u>23</u>...+55 °C

- storage temperature -25...+85 °C

- humidity < 95% (without condensation)

- external magnetic field <u>0..40</u>..400 A/m

- operation position vertical

– warm-up time30 min.

Degree of protection IP:

from the front IP 50

IP 20 from the terminals

Test voltage:

2210 V AC rms 1 minute between housing / power supply and:

- RS485
- binary outputs
- analog inputs

1390 V AC rms 1 minute between:

- analog inputs / RS485
- analog inputs / binary outputs
- RS485 / binary outputs

Power consumption: ≤ 13 VA Weight < 0.4 kg

Dimensions 48 X 144 X 100 mm

EMC compatibility:

- immunity to interference in accordance with EN 61000-6-2
- interference emission in accordance with EN 61000-6-4

Safety requirements:

in accordance with the standard EN 61010-1

insulation between circuits basic installation category III, degree of pollution 2,

maximum voltage relative to earth: - for power circuit 300 V

- for input circuit 600 V - for other circuits 50 V

• altitude < 2000 m

41

12. ORDERING CODES

Bar graph colour three-colour (R, G) seven-colour (R, G, B) M T seven-colour (R, G, B) M The colour of displays on channels and 2 red green Go n request ") R green Go n request ") R green Go n request ") X Input signal Goutput signal Signals Universal inputs On request ") U U TA NOT	NA5Plus meter	-	X	X	X	X	X	X	XX	X	X	
The colour of displays on channels 1 and 2	Bar graph colour	three-colour (R, G)	Т			•						
Signal S		seven-colour (R, G, B)	М									
1 and 2 green		red		R								
Input signal		green		G								
Analog output signals	T dild 2	on request *)		Х								
Analog output signals none	Input signal	universal inputs			U							
Current 0/420 mA		on request *)			Χ							
Current 0/420 mA		none				0						
2 x current 0/420 mA 3 2 x voltage 010 V 4 current 0/420 mA and voltage 010 V 5	signals	current 0/420 mA				1						
2 x voltage 010 V		voltage 010 V				2						
Current 0/420 mA and voltage 010 V 5		2 x current 0/420 mA										
None 10		2 x voltage 010 V										
4 relay outputs		current 0/420 mA and voltage 010 V 5										
8 OC type outputs 8	Alarm outputs	none 0										
Power supply		4 relay outputs					4					
2040 V AC 2060 V DC.		8 OC type outputs										
2060 V DC. 4	Power supply	95253 V a. c. / d. c.										
Special *) XX								4				
Language Polish P English E	Version	standard						00				
English E		special *)							XX			
	Language	Polish								Р		
other *) X		English								E		
		other *)										
Acceptance tests: without additional requirements 0	Acceptance tests:	without additional requirements									0	
with quality inspection certificate 1		with quality inspection certificate										
acc. to customer's requirements *)		acc. to customer's requirements *)										

^{*}After agreement with the manufacturer

SAMPLE ORDER:

The code NA5Plus-TGU18200E0 means:

NA5A – NA5A meter

T – RG bar graph

G – display in green colour U – universal inputs

1 - current output 0/4...20 mA

8 – 8 binary OC outputs

2 – power supply 95..253 V a. c. / d. c.

00 – standard version,

E – English language version, 0 – without additional requirements.





LUMEL S.A.

ul. Sulechowska 1, 65-022 Zielona Góra, POLAND tel.: +48 68 45 75 100, fax +48 68 45 75 508 www.lumel.com.pl

Export department:

tel.: (+48 68) 45 75 139, 45 75 233, 45 75 321, 45 75 386

fax.: (+48 68) 32 54 091

e-mail: export@lumel.com.pl